



RoverPC Mobile

User's Guide
Model Number: S5

Please read this guide
carefully before using the
phone for the first time.

Content

WHAT IS INSIDE THE PACKAGE?	9
APPEARANCE	9
SIM CARD	11
BATTERY	12
MINI USB CABLE	13
USAGE OF MINI SD CARD	13
FIRST TIME TO USE	14
TODAY	14
SELECTING THE SCREEN ORIENTATION	15
SWITCHING ON/OFF THE SCREEN	15
TURN ON/OFF YOUR PHONE	17
ENTERING PIN CODE	18
RESTARTING THE PHONE	18
APPLICATION MANAGEMENT	18
PHONE PROTECTIONS	20
ENTERING TEXT	21
WRITING ON THE SCREEN	22
DRAWING ON THE SCREEN	22
RECORDING	23
2 PHONE*	24
DIAL WINDOW	24
MAKING A CALL	24
MAKING A CALL	25
ENDING A CALL	27
ANSWERING OR REJECTING A CALL	27
OPTIONS DURING A CALL	27
CALL HISTORY	28
SPEED DIAL	29
EMERGENCY CALLS	30
INTERNATIONAL LONG DISTANCE CALLS	30
CALL WAITING ***	30
CONFERENCE CALL***	31
TEXT MESSAGING	31
MMS MESSAGING	33
SET THE SCENE MODE	34
RING SETTING	35
PHONE SETTING	35
VOICE MAIL ***	36
CONTACTS	37
<i>View the Contacts</i>	37
<i>To create a new contact</i>	38

SIM CARD CONTACTS.....	38
OPERATE BY THE NUMBER KEYPAD.....	39
3 CONNECTING TO THE INTERNET	43
CONNECTING TO THE INTERNET	43
GPRS	43
POCKET INTERNET EXPLORER.....	44
SENDING EMAIL	44
RECEIVING EMAIL.....	45
WRITING EMAIL	45
<i>Pocket MSN</i>	46
4 ACTIVESYNC.....	48
INSTALLING MICROSOFT® ACTIVE SYNC®	48
SYNCHRONIZATION	48
ACTIVE SYNC VIA BLUETOOTH.....	49
MANAGING THE FILES IN PC	49
BLUETOOTH	49
5 APPLICATIONS.....	52
CAMERA.....	52
<i>Taking pictures</i>	52
<i>Self-timer</i>	52
<i>Flashlight</i>	53
<i>Setting the Resolution</i>	53
<i>Setting the saving folder</i>	53
RECORDING A VIDEO CLIP	53
BROWSING PICTURES AND VIDEOS	54
CALENDAR	54
TASKS	55
NOTES	56
WORD MOBILE.....	56
<i>Creating a new document</i>	56
EXCEL MOBILE	57
<i>Creating a new worksheet</i>	57
POWERPOINT MOBILE.....	57
MICROSOFT® WINDOWS MEDIA™ PLAYER	57
6 SETTINGS	59
CLOCK SETTINGS	59
ALARMS SETTINGS.....	60
USB SETTINGS	60
MEMORY MANAGEMENT	61
MASTER RESET	61
PERFORMANCE SETTINGS.....	61

BUTTON SETTINGS.....	62
SOUNDS & NOTIFICATIONS SETTINGS.....	63
SOFTWARE INSTALLATION.....	63
SETTING THEME.....	64
GPRS AND MMS SETTINGS.....	65
TROUBLESHOOTING.....	67
SPECIFICATION	69

Care and Maintenance

The following safety precautions should always be followed during the using of your phone:

- Make sure that your phone has been shut down in airplanes, and the wireless function has been disabled before going aboard, since it might still be working for a while after the phone is turned off.
- Keep away from heat sources and high-voltage environment, such as electric appliances or electric cooking equipment. Keep the phone in normal temperature. The phone could be damaged in an atmosphere with temperature higher than 55° or lower than -10°.
- Take action on anti-fire. You must turn off your phone when accessing highly inflammable articles. Shut down your phone in gas stations or fuel warehouse, etc.
- Do not use a hand-held phone while driving.
- Only use the standard battery, battery charger and the accessories approved by the mobile phone vendor. We take no responsibility for any damage or any results caused by using of the battery, battery charger and accessories from a third party.
- Do not try to unpack the crust of the phone or battery. Nor to disassemble the phone or battery.
- Keep away from electrical appliances such as TV, radio or personal computer, cardiac pacemaker and hearing aid, etc. Keep your phone away from credit cards and the magnetic area.
- Do not subject your phone to mechanical vibration or shock. Do not click the screen with sharp objects. Rough handling can shorten the life of your phone.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use only soft cloth to clean your phone. Do not use the solvent such as benzene, thinner or alcohol. Keep your phone away from harsh chemicals, strong detergents and solvent.
- Do not expose your phone in excessive smoke or dusts, nor in strong sunlight.
- Keep your phone dry. Do not use it in the environment of high humidity, such as in a bathroom. The phone is not waterproof. Do not subject it to rain nor to get wet.
- Use the accessories like the earphone carefully. Do not touch the antenna unnecessarily. Only use the original antenna. The use of any unapproved antenna may damage your phone.
- To plug out the charger from the phone, hold the charger and then pull. Do not pull the wire of the charger. Do not touch the charger with wet hands.
- Do not use your phone as the only communication facility for emergency e.g., medical treatment and rescue.
- Please keep your phone out of the reach of small children to avoid danger.

When using the battery, please follow the safety precautions as follows.

- Before using the battery, please read the user guide carefully and pay attention to the labels.
- Please charge the battery indoors with cool and airy condition (temperature: 0-25°C, relative humidity: below 65%). If the environment temperature of charging is higher than expected, it leads the battery to get hot, smoking, distorted, damaged, blowing up, or even worse...explosion.
- There are specific protecting circuits and parts inside the battery. Do not disassemble it.
- Do not squeeze and short-circuit the battery. Squeezing and short-circuit may damage the battery and the components. Short-circuit can occur when a metallic object (such as coin, clip or pen) makes the direct connection of the '+' and '-' poles of the battery. Therefore, do not put the battery together with metallic objects.
- Keep the battery and its metal contacts clean.
- Never use a damaged or exhausted battery.
- Replace the battery which no longer working well. The battery may be recharged and discharged hundreds of times before replacement. The battery is rechargeable but it wears out eventually. When the working time (talk-time and standby time) of the battery is observably shorter than normal, it is time to replace it with a new one.
- Do not expose the battery and charger in direct sunlight, nor subject to excessive smoke and dust. Do not use it in highly humid environment, such as in a bathroom. The battery is not waterproof; so do not subject it to rain or to get wet.
- Do not leave the battery in a place too hot or too cold. The environment with the temperature higher than 55°C or lower than - 10°C deteriorates the battery performance.
- Do not dispose the battery in fire! Try best to avoid explosion.
- Do not dispose the battery in water! Water makes the electronic circuit short-circuited and makes the battery hot, smoking, distorted, damaged, and exploded.
- Dispose batteries according to local regulations (e.g. recycling). Do not dispose batteries as household waste. Try best to avoid explosion and pollution.
- Only charge the battery with dedicated charger. Do not charge continuously for over 12 hours.
- Please keep the battery out of the reach of small children to avoid danger.
- All above mentioned precautions are equally applicable to your phone, battery and accessories. If any malfunction occurs, please take your phone to the nearest qualified service facility, where you will get assists or arrangements for service if necessary.

When using the charger, please follow the safety precautions as follows.

 
- Please carefully read the instructions and surface indication of the charger before use.
- Do not disassemble or modify the charger. Do not use the charger in case the power cable is broken; Otherwise there might be the risk of electric shock, fire, or damage of charger.

- Do not touch the charger with a wet hand. In case the charger is in contact with water or other liquid, please cut off the power supply immediately.
- Avoid shortcircuit of the charger. Avoid mechanical vibration or shake of the charger. Avoid exposure of the charger in the direct sunshine. Do not use the charger in the humid environment such as the bathroom. This device is not waterproof and should stay away from rain or moisture.
- Do not use the charger in adjacent to the electric appliances such as television and radio.
- Hold the charger when unplugging. The pulling of power cable may result in damage of it.
- Place your phone out of the reach of children to avoid any danger.

1 Overview


What is inside the package?

As unpack the box, you will look up the following:

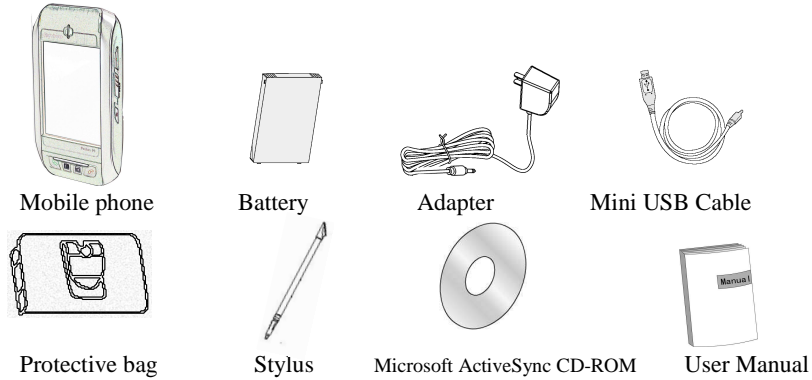


* The above will be different with the product model, please depend on the final packing list.


Appearance

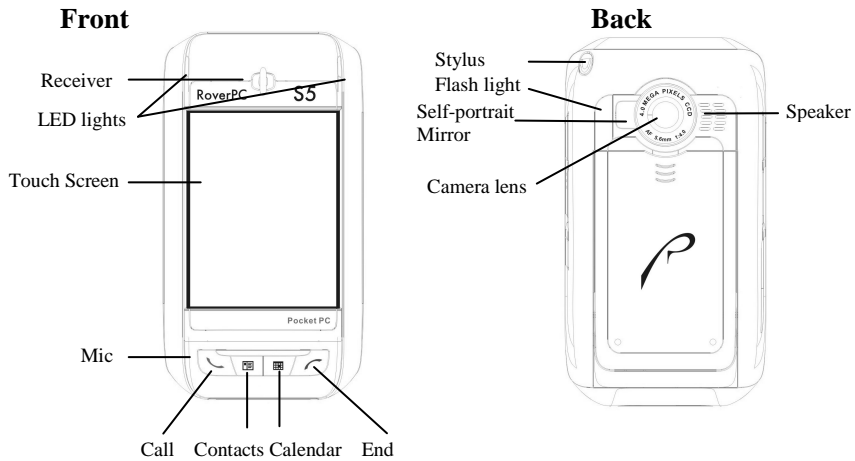


Note: Before using your mobile phone, you should insert the SIM card, and insert and charge the battery. Make sure to detach the charger before inserting or removing the SIM card.

Sides

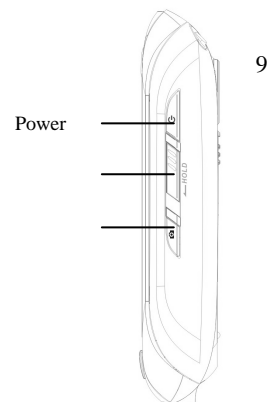

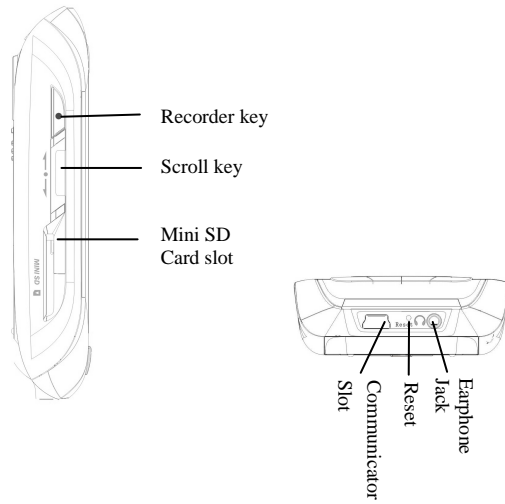

Number keypad:

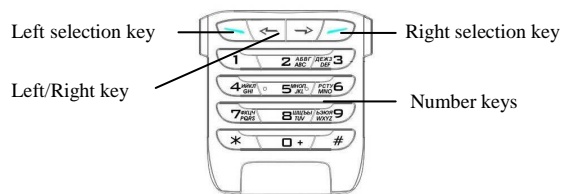



Install the Number Keypad

The Number Keypad is provided in the gift box. A screwdriver for removing the Number Keypad is also provided. Please make sure that the mobile phone has been shut down and all accessories have been disconnected before you remove the Mini keypad. The detailed procedures are shown as follows:

Warning: Please keep the screwdriver away from children.



(1) Remove the Mini Keypad

Release the battery cover and take out the battery. Use the screwdriver to screw off the screws fixed within the Mini Keypad. And then you can pull the Mini Keypad downwards to remove it.

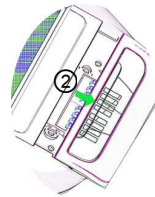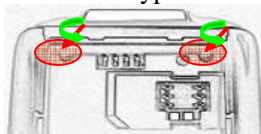


(2) Install the Number Keypad

Unfold the Number Keypad, pull it upwards slightly and press down as shown in the following pictures. After that, fix the two screws tight into the battery compartment.

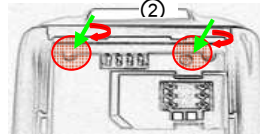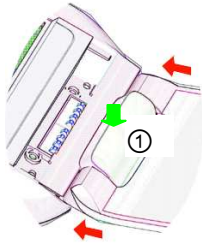

Remove the Number Keypad:


Pull the Number Keypad downwards and remove it as the following picture shows:

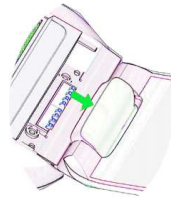

SIM Card

Before using the mobile, please insert the SIM card. The SIM card has a PIN code, which is supplied by your operator. For the first time of usage, you may be asked to enter the PIN code.

1. Please press **Power** key to turn off the screen.
2. After removal of the battery, please insert SIM card into the slot. Please pay attention to the direction.

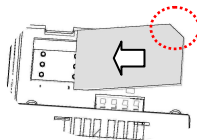

Notes: Before you use a new SIM card, you may be asked to enter the PIN code. The PIN code is made of 4-8 numbers, which can be provided by the network operator. If you enter the wrong number for three times, the SIM card will be locked. Please contact the network operator, or then the SIM card will be invalidated for ever.


Tips: If you have not inserted the SIM card, please turn off the phone to enter the Flight mode to save power.

Battery


Warning! Be sure to use only with specific charger and in well ventilation environment with surrounding temperature not higher than 50°C. Keep the charger away from fire. Never short-circuit or squeeze the battery.
Before removing the battery, please make sure that you have disconnected all outer cables, such as the adapter and USB cable.

Inserting the battery:

1. Press down the battery cover and slide it downwards to remove it.

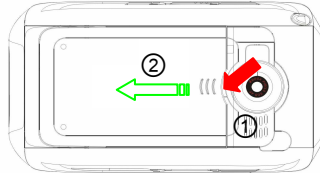


2. Place the battery in the battery compartment.

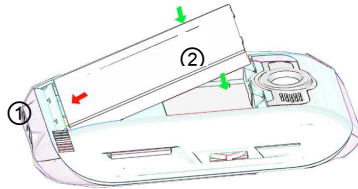

3. Place the battery cover and slide upwards.

Notes: Please press and hold the **Power** key to power on.

Removing the battery:


1. Disconnect all outer connections, then press **Power**  to turn off the screen.
2. Open the battery cover and remove the battery.

Warning: Make sure to turn off your mobile and disconnect all the outer cable before removing the battery.

Charging the battery:

When the battery needs charging, a battery low message will appear on the screen. As you use a new battery, charge the battery for at least 8 hours. Please remove the battery for a long term of storage.

1. Please connect the mobile and the adapter.
2. Connect the charger to the phone as shown in the picture below. The indicator on the top of the mobile is in steady green light as charging.
3. As the battery is full, the indicator will become invisible. Then you can pull out the plug and disconnect the charger.

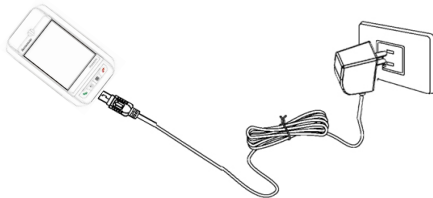

Battery life estimates:

- Talk-time: 4-6 hrs*
- Standby time: 120-200hrs*

Mini USB Cable


Mini USB Cable connects the phone with PC to sync the data. Please see the ActiveSync chapter for the detail. As the phone is connected with the PC, it will automatically be charged.

Usage of Mini SD card

Your phone has an extended slot which is compatible with Mini SD cards. You can use them to backup and store your data and files.

Inserting the memory card

1. Hold your phone tight in hand and insert the Mini SD card in the right direction as shown in the picture below. When the card is fastened in the phone, it is totally fixed in the phone with nothing left outside.

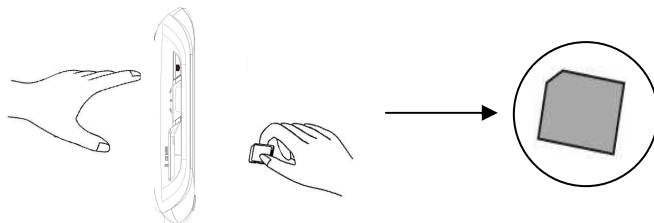

Taking out the memory card

1. Hold your phone, press down the top of the memory card. It pops up automatically.
2. Take the card out of the phone.


Tips: During the reading or writing process of the Mini SD card, please do not take it out, otherwise it will cause malfunctions.

First Time to Use

1. Insert SIM card. Only with the SIM card, you can use the wireless data function and the telephony.
2. Install the battery. Please refer to the above section for battery installation.
3. Plug the charger into the communicate socket of the mobile phone, and plug the charger into the wall socket or the junction box of power supply.
4. If the phone has not been turned on automatically, please press and hold “**Power**” key until the screen displays.
5. Follow “Welcome” wizard to finish the settings.
6. Click the touch panel to Today menu.

Notes: As each individual has his/her preference, the factory default settings might not be the best for you. Please change the settings from Settings/System according to your preference.

Today

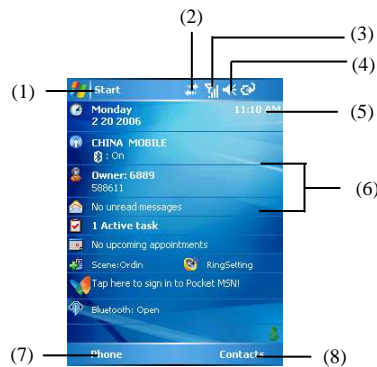

- ① Go to an application.
- ② GPRS or connection information.
- ③ Network status and options
- ④ Tap to change the volume or mute all sounds.
- ⑤ Tap and hold to change time format.
- ⑥ A glance period.
- ⑦ Tap to Phone
- ⑧ Tap to Contacts

Icon	Explanation
	Adjust the system volume and vibration.
	In charging.
	Battery low.
	Battery very low.
	Battery full.
	The ON/OFF status and signal strength of the mobile connection.
	GPRS is available.
	One or more instant messages received.
	One or more mobile e-mail/SMS messages received.

Selecting the Screen Orientation

The phone supports two screen orientations: portrait and landscape. You can go to “Settings /Screen” and select the screen orientation from the two options, either in portrait/landscape for right-handed users, or landscape for left-handed users.



Switching on/off the Screen

Switch on the screen:

- Press the **Power** button;
- Press the shortcuts for the applications, for instance, **Contacts** etc.

Warning: make sure the **Hold** key disabled.

Switch off the screen:

- Press the **Power** button to switch off the screen.
- As the mobile screen is turned off, your mobile is idle. For an incoming call, you can press **Call** key to accept or press **End** to reject.

Switch on the backlight:


- Press and hold the **Power** button to switch on/off the backlight.



Notes: By selecting the options in the Settings/Power, you can select the time duration to automatically switch off the device when it is in Idle. This consideration helps to save power and extend the working/standby time of the battery.

Turn on/off your phone

Turning on your phone:

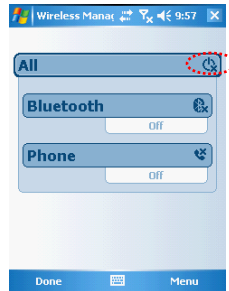
- Tap  and choose the “Wireless Manager”. Tap the “All” icon to turn off the flight mode.





- Or press and hold the END key  to turn on your phone. The upright on the screen shows  as your phone turn on.

Turning off your phone:

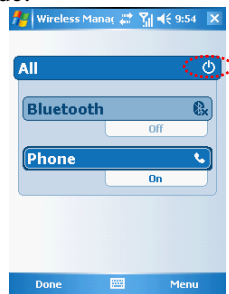- Tap  and choose the “Wireless Manager”. Tap the “All” icon to turn on the flight mode.




- Or press and hold the END key  to turn off your phone. The upright on the screen will show  as your phone turn off.

Warning : In the restricted condition, you must follow the ways as declared to turn off your phone and press Power key to turn off the screen.

Tips: Enable **Hold** button to avoid the phone turned on casually when you carrying it.

Entering PIN code

You can use the wireless function of phone only after you have inserted your SIM card. Generally speaking, SIM card is preset with a PIN code, which is provided by your service provider.

1. Click “ Phone”.
2. In the Dial window, enter the PIN code.
3. Click the ENTER button.




If you enter the wrong PIN code for 3 times in succession, the SIM card will be locked. In this case, please contact your service provider. Do not try to unlock yourself, otherwise your SIM card will be locked eternally.

Restarting the phone

If your phone does not respond to your operations on the buttons or touch screen, you'd better restart your phone. Restart will initialize your phone functions and reallocate the memory. Your data will be preserved. However, some unsaved data in running applications might have been lost.

1. Plug the stylus from its slot.
2. Use the point of the stylus to press the Reset button.

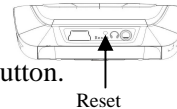
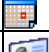 





















Application Management


Two ways to run applications


- From the “Start” menu, click the application icon.
- From the “Start” menu, tap “Program” to show more applications.

Applications in the phone:

	Icon	Program Name	Notes
1		ActiveSync	Sync the inform between the phone and PC
2		Calendar	Create the appointments and the meetings
3		Contacts	Manage the information of your friends and colleagues
4		Task	Manage the tasks
5		Notes	Create notes, including handwriting and recordings.
6		Pocket MSN	Visit MSN Pocket Hotmail and MSN Messenger
7		Messaging	Receive and send Email/SMS/MMS
8		Internet Explorer	Browse the web page or download files from Internet
9		Phone	Make or answer calls
10		SIM Toolkit	Network service
11		Scene mode	Quick set the scene mode
12		Camera	Take pictures /record videos.
13		Excel Mobile	Create or edit the excel file
14		Word Mobile	Create or edit the doc document
15		Powerpoint Mobile	Show the ppt file
16		Windows Media	Play the audio and video file
17		Picture and Video	Browse the pictures and video
18		Explorer	Manage all files and programs
19		Search	Look up the information
20		Solitaire	Enjoy the Solitaire everywhere
21		Bubblebreaker	An interesting Bubblebreaker game

Exit the Application:

1. In Today window, click  ---Settings.
2. In the System panel, click the **Memory** icon.
3. Select to the application from Running Programs, and click “Stop” button to quit.

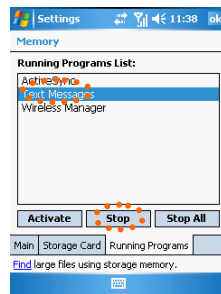



Phone Protections

Keyboard and LCD lock

Please slide the **HOLD** key to the Lock position, in order to avoid turning the phone on casually during carrying. When it is in the status of lock, your phone does not response to your operations on the LCD and keyboard. However, you can get call-ins. Press **TALK** key to answer the coming calls or press **END** key to reject it.

Phone password

There is quite a lot of personal information stored in the phone, and some of them are very personal. In order to protect unauthorized access, you can set the password. When using the Number Keypad, please unfold the keypad to input the password.

1. Tap  --Settings.
2. In the Personal panel, click the icon of the Lock .
3. Select the Password.
 - A simple 4-digital password.
 - Strong alphanumeric (including complicated digitals and letters).
4. Select the time duration to be unused for the device when it is in Idle, i.e., to select from the options of “Prompt if device unused for”.

When the phone is not used for longer than the set time duration, correct password is needed to reactivate the phone.

5. Click “Hint” to enter a password hint in case you forget your password.
6. Tap “OK” to save your settings.

Warning : You should remember your password. If you forget, you can get your password back via the password hint. In case you even forget the password hint, you have no other choice except contacting the local service.

Security code

You can use the following descriptions of PIN to protect your phone against unauthorized use.

PIN code

It protects the SIM card against unauthorized use. If your phone has already started the PIN code for protection function, after switch on, the screen will show a hint to input the PIN code. If you enter an incorrect PIN code three times in succession, the SIM card will be locked automatically. You must input the PUK for unlocking. The PIN code can be obtained from the network operator.

PIN2 code

While using the special functions as calculating charges and fixed dialing supplied by the network, the required personal identification code is generally provided together with the SIM card. These functions are available only under the SIM card support.

Warning: If you enter an incorrect PIN code (PIN2 code) three times in succession, the SIM card will be locked. Please contact the network operator immediately for the decoding help. Trying to decode by yourself may cause the SIM card to be invalid permanently.

Entering text

There are four text input methods:

Block Recognizer

With Block Recognizer you can write on the screen with the stylus. Write letters in the left box (labeled abc) to create letters; Write numbers in the right box (labeled 123) to create numbers.

Keyboard

Soft Keyboard is a keyboard showed at the bottom of the screen. You can click the letters accordingly for data input.

Letter Recognizer

With Letter Recognizer, you can write on the screen with the stylus. Write capital letters in the left box (labeled ABC) to create capital letters; Write small letters in the middle box (labeled abc) to create small letters; Write numbers in the right box (labeled 123) to create numbers.

Transcriber

With Transcriber, you can write on the screen with the stylus exactly in the same way as you write on a piece of paper. Different from Letter Recognizer and Block Recognizer, you can write a sentence or a series of letters and then turn them into print Enters.

Switch among Different Input Methods

1. Tap the “▲” icon on the centre of the menu and select the input method you want. Click the icon again to close the input panel.

When you input through the panel, the phone can automatically recognize the word you input, and shows the word matched on the panel. You can directly click it for input.

Note: To change the word completion settings, click “Settings” and select “Personal/Input” icon, then click “Word Completion” to modify the settings.

Writing on the Screen

In some programs, you can write directly on the screen. You can write a phrase or even a sentence before they are recognized and turned into print Enters.

In case of recognize error of some words, you can select the error words and choose “Spell Check” in the menu for correction.

Drawing on the Screen

You can directly draw on the screen in some programs.

There will be grids on the screen when drawing. If the first paint goes across three lines of grids, a paint frame will appear. The following paints or those in contact with the frame will be regarded as part of the drawing. (The paint that does not go across three lines of grids will be regarded as a text input.)

Recording

Recording can be a very convenient way of data input. By recording, you can make records on notes, messages, telephone numbers, and etc. In Notes, you can make and save an individual recording file, in some programs such as Notes and Word; you can embed recording objects within the document.

 
1. Please keep your mouth or sound source close to the microphone of the device.
2. Press and hold the recording button, when you hear a beep, the recording starts. Keep holding the button to continue recording.
3. Release the button after the recording is over, when you hear two beeps, the recording completes. The recording file is displayed as an icon of speaker in the file.








Notes: You can start the recording or play by clicking the buttons in the Recording bar accordingly.

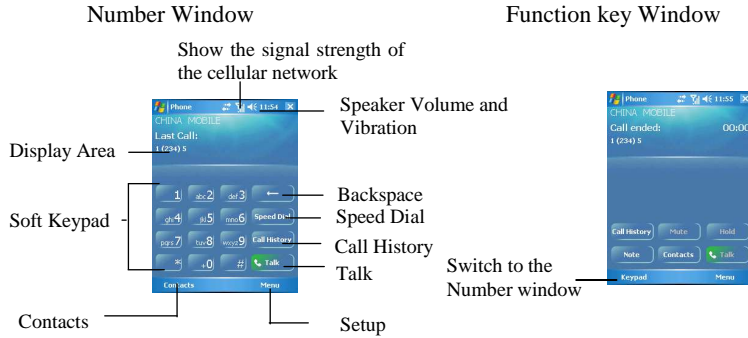2 Phone*

Dial Window

1. Press Talk key  to show the dial window.






Indicator	Meaning
	Phone off or out of network service. Click this icon to turn on Wireless Manager prompt.
	In network service. Click this icon to turn on Wireless Manager prompt.
	Indicates that signal is at full strength.
	Voice calls active/Call on hold.
	Call Missed. Click this icon to view the call(s) you missed.
	Unread E-mail or SMS. Click the icon to view unread SMS or E-mail.
	GPRS is available.

* In this chapter, marked **: the functions need the SIM card supports.
 marked ***: the functions need the network provider supports.


Making a Call


Making a call using the soft keypad :

1. Press Talk key  to enter the DIAL window.
2. Enter the digits with the soft keypad and click Talk on the bottom right of the keypad, or press Talk key .

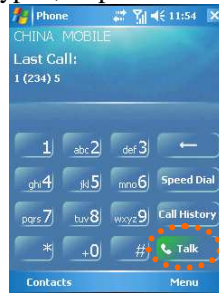


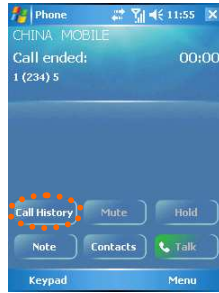
Making a call using the Contacts :


1. Press **Contacts** key  .
2. Press and hold the contact you want to call, and select the phone number.

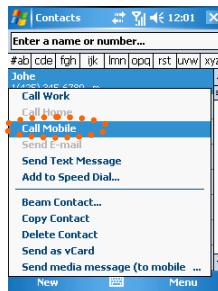


Making a call using the Call History :

 1. Press **Talk** key  to enter the DIAL window.
2. Press **Call History** button.

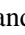


3. Call History provides the time and duration of all missed calls, outgoing calls, and incoming calls. Press the icon  in front of the information to make a call.

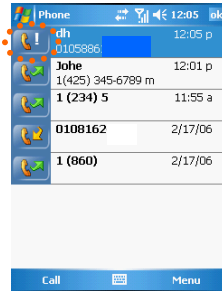


Making a call using the Message :

1. Click the “Text Messages” in Today window.

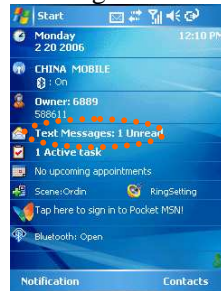

2. Select the message you want to call.
3. Press Talk key  twice.

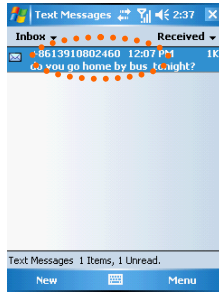



Making a call using the Speed Dial :

1. Press the **Speed Dial** button, and select the speed dial location number of the desired contact.
2. If Speed Dial is set to on, press and hold a speed-dialing key until the call is started.
3. You can assign a phone number to one of the Speed dialing key. See Speed Dial section.

Ending a Call

1. Press End key  or End button.

Answering or rejecting a Call

1. To answer an incoming call, press the Talk key , or to reject an incoming call, press the End key .

Options during a Call

Changing the volume

1. Scroll the scroll key to change the volume.
2. Press the volume icon in the up right corner of the window to change.






Mute

1. Click the Menu and the **Mute** option in the down right corner of the phone window.


Call History

You can check the record of all calls, including the most recently incoming calls, missed calls, and outgoing calls. In Dial window, you can use the scroll key or Navigation to access to the call history.

 : Missed calls  : Incoming calls  : Outgoing calls.

Viewing the call history

1. Select the call record you want, the time data will be displayed automatically below the record.

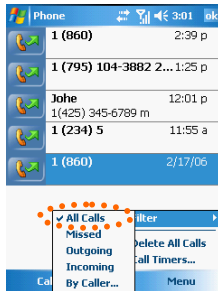


Making a call

1. Click the Icon (for instance ) before the calls record you can make a call directly.

Sending a SMS

1. Press and hold the call record, you can get a popup menu, and click “Send Text Message” to send a SMS.

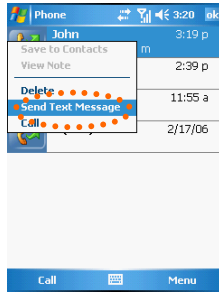

Deleting the call history


1. Click the **Menu**, which is in the bottom right corner of the window, to get the popup menus. And click “Delete all calls” option to delete all the call records in the call history.


Tips: If you want to delete one record, please press and hold the record to choose “Delete” from the popup menu.

Viewing the Call Timer

1. Click the **Menu** at the bottom right corner of the window, and select the “Call Timers...” option. Then you see the time records for the calls.

Speed Dial

1. Press the **Talk** key  to enter the Dial window.
2. In the Dial window, click **Speed Dial** button to open the speed dial window.
3. In the window, click the “**New**” in the bottom right corner; select the contact from the “All Contacts” list.
4. In the Speed Dial window, select the speed dial number from the Location box, and click “**OK**” to save it.

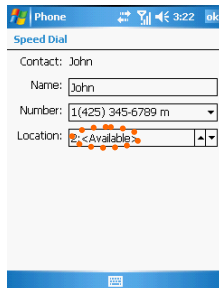


Emergency Calls

Your mobile phone supports the international emergency calls. When and only when you are in the coverage of network, you can call the emergency number, such as 112, no matter the SIM card is inserted or not.

Notes: There exists the possibility that your operator has the local emergency call number.

Some mobile operator might require SIM card inserted before you dial the emergency call. Even more, there are possibilities that PIN code needed for the emergency call service.

International long distance Calls

To dial an international call, of which the phone number is not saved in your phone or SIM card, press 0 until “+” is displayed. “+” replaces the “00” for the international calls. Then, enter the whole phone number, including the country code, area code (no more the first ‘0’) and the phone number. And click the **TALK** button or press the **Talk** key .




Call Waiting***

Call waiting function makes the short alert for a third-party incoming call when you during a call. In the incoming call window, click **Ignore** to refuse the call, or click **Hold** to switch to the 3rd call. This function needs the support of the operator.


Hold the call: in the incoming call notification window, click **Answer** button to hold the current call and switch to the new incoming call.

Swap: you can click the  button to switch between the calls.

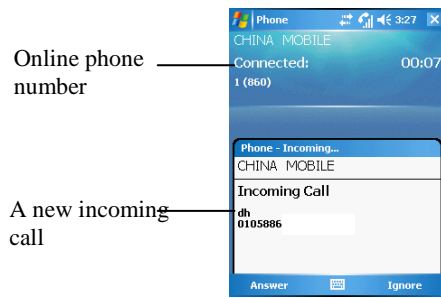

Conference Call***

Conference call allows you to talk with several ones together. This function needs the support of the operator.

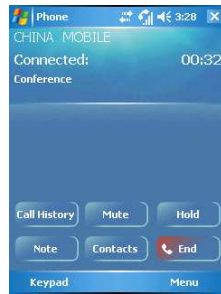

Text Messaging

Sending a message

1. In Today window, click “No Unread messages”.





2. In the window, tap “▼” to select “Text Messages”. In Messaging window, click the New in the bottom left corner.

3. Enter the phone number in <To> bar. Use “;” to separate the phone numbers.
4. Or, click the icon “To” in the toolbar to get the contacts list and select the contacts there.
5. Enter the body text. You can also click “My Text” to enter preset phases.
6. Click **Send** button to send the message.

Tips: your phone has the function of Group message. You can enter many phone numbers in the To box, and the message can send to all the receivers together. Be sure to use semicolon to separate the numbers.

Reading a message

When a new message arrives, there is a dialog displayed with a sound alert to tell you of the coming new message. The default setting of new text message alert is Sound and Light. After the alert window disappears, there is an icon  remained on the top right corner of the screen. The message line in the Today window also has notifications.

1. Click the text message icon  or the Message line in the Today window, you can read all messages in Inbox.




Managing the messages

1. In the Today window, click “No unread messages”.
2. Click the folder list and you can view all the text messages in the folders of Deleted Items, Drafts, Inbox, Outbox and Sent Items.
3. To delete the text message: you can use the stylus to select those messages you want to delete. And press on them until the popup menu pops. Select “Delete” to delete the messages.

Text Messages settings

1. In the Today window, click “No unread messages”.

2. Click **Menu** and select the **Tools > Options**.
3. **Signature settings:** in the Accounts panel, click “Signatures” button. Then enter your personal preferences, and click **OK** to save.

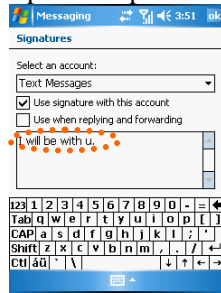


4. **Message service center settings:** before you can use the text message services, you must enter the number of the service center, which is provided by the network operator. Select **Phone > Menu > Options > Services > Voice Mail and Text Messages**, then click **Get Settings** to modify the service center number.


MMS Messaging

The usage of MMS is very similar to email. You can send pictures, audio file, text and multimedia message via MMS. How much MMS contents can be sent in a MMS depends on the operator system. For details, please contact your operator.

Creating a new MMS

 1. In the Today window, click “No unread messages”.
2. From the folder manager, choose the MMS.
3. Click the “New” in the toolbar. Enter photo, text, and audio in their areas, following the hint. You can click “Edit” to add more slides.

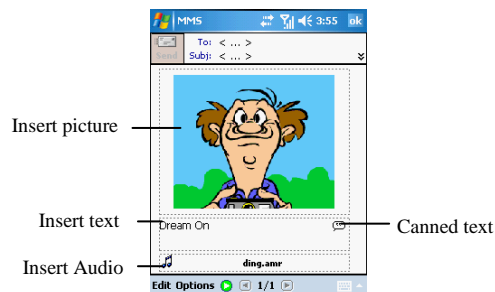


4. Click  to preview the MMS.
5. Click Send to Send panel. Enter the phone numbers, which you want to send the MMS to, or the email address. And click “Send” button.

Tips: pay attention to the size of the MMS before sending. If your MMS is larger than the up limit that the operator supports, you cannot succeed to send the MMS. The one who you send MMS to should have a phone, which also has MMS function to read your MMS. Suggest you use email system, that is, enter email address and send the MMS to the email box.

Set the Scene mode

1. In today window, click “Scene Mode”.

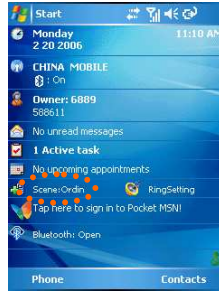

2. In the window, choose the setting mode.



3. To modify the scene: click “Edit” button and modify the option from the yellow arrow. After modifying, please click “OK”.



4. Click OK.

Ring Setting

1. In the Today window, click “RingSetting”.
2. In Sounds setting window, you can set up the ring type, ring tone, etc. Click the ring file name from the list and you can play the ring.
3. Click “OK” button to save and exit the setting.



Ring-tone downloading

You can have several methods to download the ring tone to your phone and enjoy your personalized ring tone:

- Via Pocket Internet Explorer to get the ring tone files.
- Via Bluetooth appliance to send the ring tone file.
- Via PC-sync to copy the ring tones from your PC to your phone.

Notes: the ringtone files support .wav, .wma and .mp3. The ringtone files should be saved in the directory of “My Documents”.

Phone Setting

You can set functions relating to the phone. The service is subject to the network.

1. From the Dial window, tap Menu-Options-Services.
2. Choose your setting option and tap “Get setting”.
3. In the service window, select the setting as you requested.

Call Barring

This function prevents your phone from making or receiving certain category of calls.

- All calls:** Restrict all incoming / outgoing calls.
- When Roaming:** Restrict all incoming / outgoing calls except those from your registered network when roaming.
- Off:** Cancel all barring services.

CALL ID

This service can prevent the master number from being sent out when dialing a call.

Call Forwarding

You can also use call forwarding to forward incoming calls to a different number based on your situation.

Unavailable: to forward calls only when your phone is turned off or you are unreachable.

Busy: to forward calls only when the line is busy.

No answer: to forward calls only when you can't answer your phone.

Call Waiting

If a third party call tries to dial you while you are in a call, your network usually tells the third party that you are busy and automatically hangs it up. If Call Waiting is set to On, the network will ask the third party to wait on-line and notify you by the alert tone or show you the caller's number that you have a waiting call.

Network

This function allows you to select a network automatically (Auto) or manually (Manual).

1. From the Phone keypad, tap Tools-Options-Network tab.

Voice Mail***

Voice mail service is similar to the phone call recording. When you can not answer an incoming call, it can be recorded as a Voice Mail. A new SMS will be sent to your phone as a new voice message in your Voice Mail inbox. The service depends on your network operator.

Notes: The Voice Inbox must be used with the Call-Forwarding and SMS.

To set the Voice Mail:

1. Press **Call** to enter the DIAL window.
2. Click “Menu-Option” on the left down corner.
3. In the “Services” window, you choose “Voice Mail and Text Messages” and “Get settings”.



4. Please input your voice number, and click OK to save. For detailed information, please contact your network operator.




Listening to the voice message:


1. Press “1” in the Dial window to dial the voice info number. Press and hold the number “1” key in the Dial window to dial the voice info number.
2. The phone design the “1” number to the Voice Inbox.


Contacts

Contacts are like an address book, in which you can store names, phone numbers, email addresses and other useful information. You can synchronize the contents in contacts with your PC by ActiveSync. The information stored in the SIM card is accessible in Contacts. You can create new and edit contacts in the SIM card.

View the Contacts


1. Click “  Contacts ” to open the Contact lists.
 - Work——Work phone ;
 - Home——Home phone ;
 - MP——Mobile phone ;
 - Email——Email address.

-  — Save in the SIM card

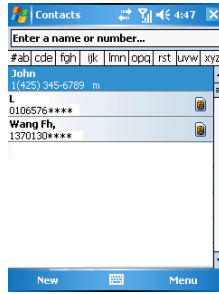

To create a new contact

1. Click “New” in Contacts window.

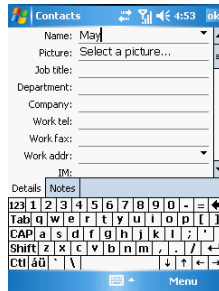


2. Click the input panel, and then input the information of the contacts.
3. Click the “Select a picture...” after the picture, to appoint the coming-call picture.
4. Click the “Ring tone” to choose the ring tone file.
5. To select a category for the contacts, click the “No Categories” next to the “Categories” and then tick on the category you prefer. Or, you can create a new category.
6. Click “Notes”, then you can add supplementary information by text input.
7. Click the “OK” button at the upper right corner to save the inputs.

SIM Card Contacts

To Create a new SIM Contact


1. Press **Contacts** button.
2. Tap **Menu** and “New SIM contact” on the down right corner.

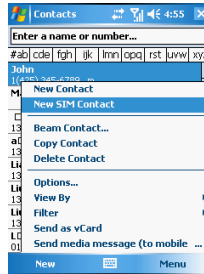

3. Input “Name” and “Telephone number”, then click “OK” to save.

To save the contacts into SIM card

1. Click the contact, and then open the view window.
2. Select the phone number, and then tap **Menu** and **Save to SIM**.

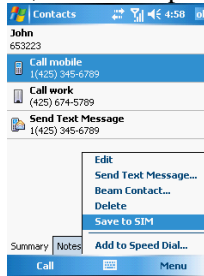


3. Tap OK to save.

Operate by the Number Keypad

When the Number Keypad is installed, the phone will automatically initialize a mini screen, where you can view information of contacts, scene mode and call records, and dial or answer calls, take photos and enjoy your music. If you want to conduct more complicated operations, please unfold the Number Keypad. Only key operations are supported in the small function screen mode. The touch panel function is disabled.

Stand-by Interface:

When the phone is idle for a certain period of time, the mini screen will enter the Stand-by Interface, where information of time, scene mode, and battery status and signal strength are displayed. If you have set the auto-off time, the mini screen display will also be turned off at the preset time.

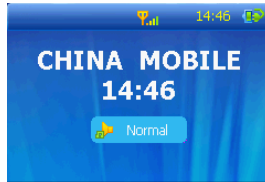

Main Interface:


In the stand-by interface, the mini screen will enter the Main Interface by pressing any key of the Number Keypad.

You can select the current application program by turning the roller or pressing the direction key.


Press “OK” button to open the selected application.





Dial:

1. Input the telephone number you want to dial by pressing the number keys, and press “Delete” key to delete the wrong input.
2. Press “” key to dial.

Speed Dial:

1. If you have established speed dial settings, you are able to make a speed dial by pressing the correspondent number key and then “” key. You can also make a speed dial by pressing and holding the correspondent number key.

Answer a call:

1. When there is an incoming call, press “” key to answer and “” key to reject.


Contacts

1. In the Contacts window, turn the roller or press “Left” or “Right” key to browse contacts, and press “View” to display more detailed information. Select the number you want to dial, and press “Call”.


Intelligent Retrieval: The intelligent search function is supported when the Number key is being used. In the Contacts window, press the letter or the

number key, the phone will intelligently match them and all met records will be listed.

Call Records

1. In the Call Records window, you can view all call records.
2. Select the call record and press “” to dial this number.

Scene Mode

1. In the Scene Mode window, turn the roller key or press the direction key to select the required mode, and press “” key to save the selected scene mode.




Earphone mode: when earphone is connected to the phone, it will be automatically switched to this mode. This mode does not support manual selection.

Camera

In the small screen, you are able to capture photos and record videos. Press the camera key to capture.

In the video recording interface, press the Camera key to start recording, and there will be a flickering red dot icon. Press the Camera key again to stop recording.

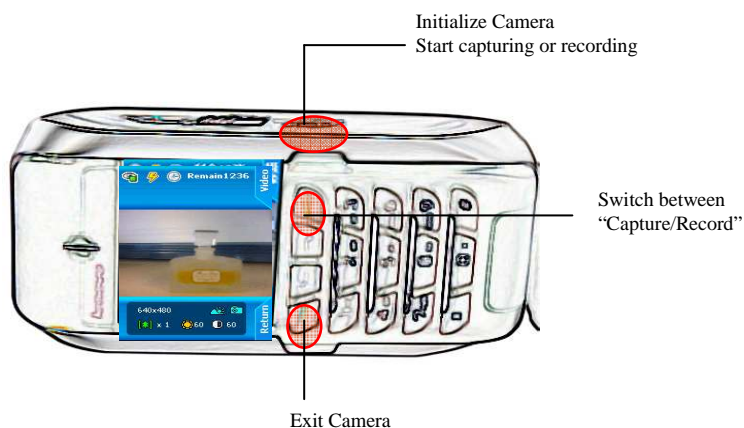

Media Player

When you have set your play lists in the Windows Media Player and the music is being played, you are able to control the play function buttons and volume by number keys.



Tips: Before making a call, please press " " key or "Return" key to exit the Media Player interface.

3 Connecting to the Internet

Connecting to the Internet


Before you can use Internet and Messaging to access the Internet and send or receive messages, you must make some user-specific settings.

- Pocket Internet Explorer
- MMS
- Email Inbox
- MSN Messenger



GPRS

Many network operators offer both GPRS and GSM services. For the details of the setting information, please refer to your operator.

Manual settings for the GPRS service.


1. Tap  > settings > connections > connections”.
2. Tap “Add a new modem connection”.
3. Enter the connection name and select a modem type, press the “NEXT” button.
4. Name the connection, such as “My GPRS”. And you can select “Cellular Line” or “Cellular Line (GPRS)” from the list box “Select a modem:”.
5. In the Access Point Name, input the name and click “Next”;
6. Enter the “User name”, “Password” and “Domain”; if necessary, click “Advanced” to set up the other information.
7. Tap “Finish” button.

Disconnected GPRS connection

1. Tap the connection icon  in the navigation bar and click “Disconnect” button.
Or Press **End** key .

Tips: When you are not using the GPRS, please disconnect it to save power.

Pocket Internet Explorer

1. Press “ --- Internet Explorer”.
2. Enter the URL of the web you want to visit in the address bar of the IE. Or select those listed to visit the link.




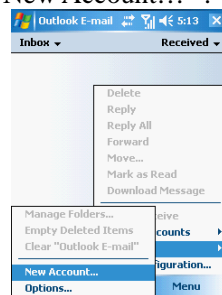
3. Click the “Go to ” icon, the green icon at the right side of the address bar to enter the web site.

Sending Email

Inbox is to receive the emails from Internet. You can get the POP3 emails from the Internet. You can also use AcitveSync to synchronize the emails with Exchange or Outlook in PC.


Email Service Setting

1. Click  - **Messaging** and get the Inbox Window.
2. Click the **Menu- Tools** in the bottom of the window. In the popup menu, select “New Account...” .




3. Enter the E-mail address.

- Click “Next” button to continue the settings.
- Select POP3 as the account Enter.
- Enter the server information. For the details, contact the email service provider for the settings.

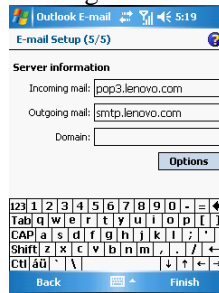

- Click the Options button to setup the SMTP settings.

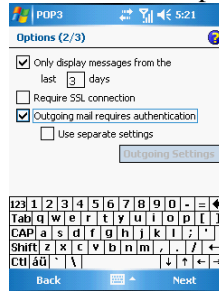

- Click “Finish” button to save.


Receiving Email

- In the Inbox window, select “Menu – Send/Receive” option.
 - When connected with the Email server, the emails in the Outbox will be sent automatically, and new emails will be received into the Inbox.
- By default, the Inbox only downloads the head of each email, instead of downloading the attachment in the emails. You can change the default settings of the email server. If you want to read the entire message, you mark the email first and connect with the mail server or re-synchronize. Click the “←” or “→” arrow to read the previous or next email.

Writing Email

- Click “New”, which is in the bottom left of the window.

2. Enter the email address of the receiver in the **To** textbox, or click the Contacts button to select the email address of the receiver from the Contacts list.
3. Enter the subject and the email content in the corresponding positions.

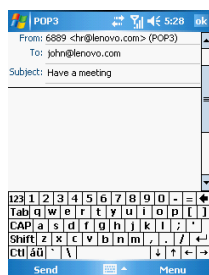

Send attachments: click the **Menu** in the bottom left window and get the menu. Select “Insert” and open the File Explorer to add the attachment.

Send the recorder file: you can select “Insert” and open the Voice Note, click the Recorder button on the toolbar to record. The phone adds the recorder file as the attachment automatically.

4. When you finish writing the email, click the “Send” at the bottom left corner of the window to send the email. Or click the OK button to save the email in the Draft box.

Tip: when your phone is connected with the email server, the email is send directly. If your phone is offline, the emails are saved in Outbox. Once you connect with the email server to synchronize with PC, the emails will be sent automatically.

Pocket MSN

Pocket MSN can visit MSN Hotmail and MSN Messenger.

MSN® Messenger

Requires:

- Microsoft Passport™ Passport or Microsoft Exchange Email account.
- MSN Messenger Passport. If you have a hotmail account or MSN account, you have a passport.

Setting an account

Before connecting, you must input your Passport or Exchange account.

1. Click the Options from the **Menu**.
2. Input your Passport or Exchange account.
3. Click "login in" and type your Email and password to login.

Tips : Your contacts will show in your phone autoly if you have used it in PC.

4 ActiveSync

With Microsoft ActiveSync on both your PC and your Phone, you can exchange information between a PC or server and your Pocket PC Phone. The process is called "synchronization."

To synchronize your Pocket PC Phone with your PC, you must install ActiveSync 4.1 or above version on the PC.


Installing Microsoft® ActiveSync®

1. Please close all applications, including those which are started automatically when the system is turned on. Close all the anti-virus applications/tools.
2. Insert Microsoft ActiveSync CD. And you can see the welcome panel.
3. Click the Next icon into next panel.
4. Click "Start from here" option.
5. Read the installation statement.
6. Click the corresponding buttons to install the following applications.
 - Outlook 2002 (suggested)
 - ActiveSync® 4.1 or above

After installation, the ActiveSync icon will be displayed on the system toolbar of your PC. For more details, please refer to ActiveSync online help.

Synchronization

1. You must install ActiveSync in your PC from the Companion CD.
2. Connect your phone and PC via a cable as the below picture.

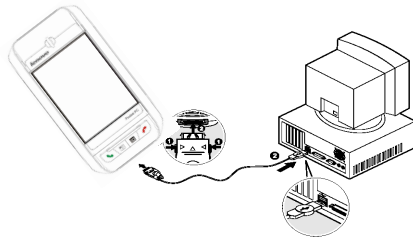

3. When the Sync setup automatically, the window pops up. Click “Next” button. If it is your first time to use the ActiveSync, you should enter the name of the mobile phone, which you name as you like.
 4. Follow the wizards on the window to finish the setting.
 5. Click “Finish” button.
- When the connection is set up successfully, the ActiveSync icon in the PC toolbar will blink in green. When disconnected, the icon will change into gray.

ActiveSync via Bluetooth

You can sync the information after the phone had been connected with PC via Bluetooth. The detailed please refer to the ActiveSync help.

Notes: You can not sync the movies or videos via Bluetooth.

Managing the files in PC

When the connection with your PC is setup, you can use ActiveSync to explore all information in your phone. And you can copy and transfer the files between your phone and PC.

1. Click the File menu in the ActiveSync on your PC. And select Browser to open the Mobile Device window.
2. All the information in your phone will be listed in the window. Click the Up button to explore the files in your PC. Drag and drop the file icon to copy the file. Or use Copy and Paste in the Edit menu to copy the file.


Tips: when you double click the file icon, it is the properties of the file that display. You cannot open or run the applications in your phone from PC side.

Bluetooth

The phone is with Bluetooth built-in. You can exchange data with other Bluetooth devices, without directly wired. The Bluetooth can be set either in the status of Turn-on or Turn-off. You can check the Bluetooth status in the Today window.

Turning on the Bluetooth

1. Click Bluetooth in the Today.
2. Tap the Bluetooth icon to turn on.

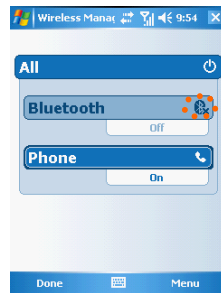


3. Click “Done”.

Tips : In order to save battery power, you can turn off the Bluetooth function when you are sure not to use it.

Pairing to your Bluetooth device

Pairing creates a unique and encrypted wireless link between two Bluetooth-enabled devices such as your Bluetooth phone. Please make sure the Bluetooth devices in working range, and make the device discoverable.

1. Click “>Settings>Connections>Bluetooth”.
2. Click “Devices” and select “New”. Your phone searches all devices within range and lists them.
3. Select the device you want to pair with, and enter a password when requested.
4. Click “Finish”.

Sending files or data via Bluetooth

Make sure the Bluetooth devices are in the working range and the Bluetooth function is turned on.

1. Select the files or the application data (for instance Contacts) you want to beam in the Explorer.
2. Click and hold the files or data, and select “Beam File...” option.

Bluetooth earphone

Before using the Bluetooth earphone, ensure that it is fully charged and bond as introduced above. Then you can see that Bluetooth is turned on in the Today window. And you can receive or make phone calls via the Bluetooth earphone. You are recommended to use the dedicated Bluetooth earphone.

Answering the coming calls

When there are coming calls, there are sound notifications both from your phone and the Bluetooth earphone. Press Answer key of the earphone, you can talk via the Bluetooth earphone. If you press the Answer key of your phone, you can use your phone to talk, and press the function key on your Bluetooth earphone to switch the call to the earphone from the phone.

Tips: In the phone window, select “Menu” - “Turn Hands-free on” option. You can to switch sound between the Bluetooth earphone and phone.

Making a call

When you dial from your phone, there is sound notification from your Bluetooth earphone, which tells you that your earphone can work. Press the function key on your Bluetooth earphone and the sound of talking will be switched to the Bluetooth earphone.

Tips: If you use a wired earphone, you cannot use the Bluetooth earphone together.

Using the Bluetooth serial port device

Before using, make sure to set up the bond.

1. In the window of Bluetooth COM Ports, click “New”.
2. Create a new virtual serial port for the Bluetooth device.


For details on the Bluetooth device, please refer to the user manual.

5 Applications

Camera

Taking pictures

1. Press **Camera** button to activate the “Camera” application.
2. Focus on the desired mode.
4. Press down the **Camera** to finish capturing.

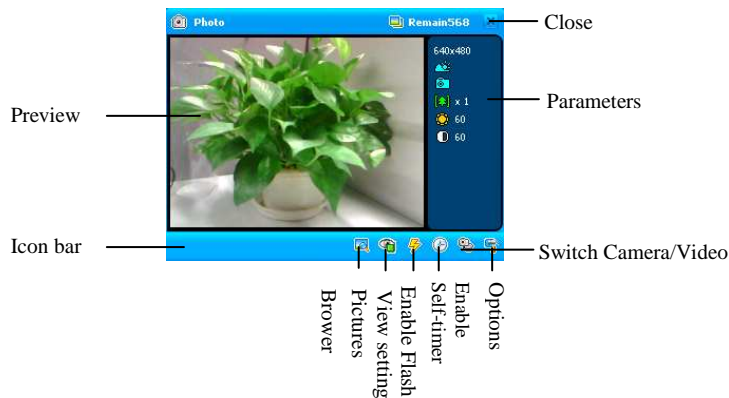


Tips: As the flash is glaring and might hurt your eyes, please keep a distance from persons. If you take a picture for a baby , it is recommended that you turn off the flash.

Self-timer


1. Press the Self-timer icon.
2. Press the Camera button. A timer icon is shown before the picture is taken.

Setting Self-timer

1. In the camera window, press “” to open the option window.
2. Click “Self-timer” , and choose the delay period.


3. Click “×” to save.

Flashlight


- Press “

Warning: As the flash is glaring and might hurt your eyes, please keep a distance from persons. If you take a picture for a baby , it is recommended that you turn off the flash.


Setting the Resolution

1. In the camera window, click “

Setting the saving folder

1. In the camera window, click “

Recording a Video Clip

1. In camera window , click “


53



The videos support two kinds of resolutions, 176×144 ; 160×120.

Tips: Before recording, please exit all other applications.


Browsing pictures and videos

1. Click “ Programs”, then click the “Pictures and Videos” icon.
2. In the window, it shows all the pictures and videos. Select the file to view.
3. Click “Menu”to set the picture to the desktop or show in the sliding.

Tips: The pictures and videos you captured have been saved in “My Documents/My pictures” directory.

Calendar

With Calendar, you can arrange your appointments in an easy way. You can select to view the calendar in different patterns (schedule, day, week, month and year) and switch among different patterns by clicking different view pattern icons.

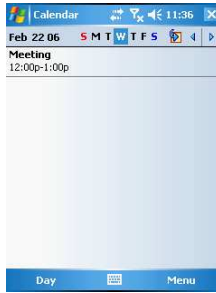

Creating a new appointment

1. Click “Menu” -“New Appointment” at the down left corner.
2. Input the appointment information in the editing screen.
3. You can set reminding for the appointment. The device will remind you before the appointment according to your settings.
4. Select a category for the appointment.
5. Click the “OK” button at the upper right corner to save the inputs.

Notes: If you have set a reminding for the appointment, the device will remind you according to your settings even when the device is on the power off status.

Tasks

With Tasks, you can learn the working progress and manage the tasks. In the tasks list, all those tasks that are not finished on time will show in red.

Creating a new task

1. Click “New Task” in Menu to open a new task screen.
2. Input the task information. Click the “▼” next to the subject for a pop-up list of the default tasks patterns. You can select the subject from the list or input by yourself.
3. Set the priority for the task.
4. Set the start time and end time for the task. A time setting window will pop up, in which you can change the year and month by clicking “◀”, “▶”, or manually change by clicking the year and month.
5. Click “No Categories” next to “Categories” to open a window, in which you can click on the default frame, or create a new category by yourself.

6. Click “OK” button at the upper right corner to save the inputs.

Notes

Notes acts as pocket electronic memorandums, in which you can type letters, writing, draw or make recordings.




Creating a new note


1. Click “New” at the down left corner to create a new note. You can input text, paint or make recordings.

Word Mobile

You can use Word Mobile in the same way as you use Word in PC. You can create or modify the word documents.

Creating a new document


1. Tap “ Programs”, choose “Word Mobile”
2. Click “New” to create a new document. Or choose the file to open.

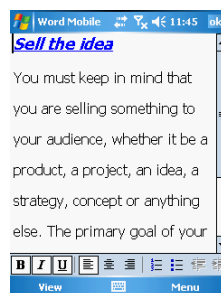


Excel Mobile

With Excel Mobile, you can create worksheets in an easy way, and synchronize or copy them between the phone and PC.

Creating a new worksheet

1. Tap “ Programs”, choose “Excel Mobile”.
2. Click “New” to create a new worksheet. Or choose the file to open a worksheet.

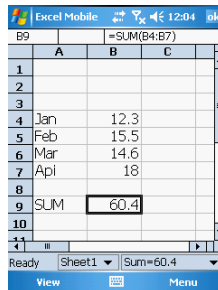


The screenshot shows the Excel Mobile application interface. The title bar reads "Excel Mobile" and the status bar shows "12:04". The spreadsheet has columns A, B, and C, and rows 1 through 10. The data is as follows:

	A	B	C
1			
2			
3			
4	Jan	12,3	
5	Feb	15,5	
6	Mar	14,6	
7	Apr	18	
8			
9	SUM	60,4	
10			

The formula bar shows "=SUM(B4:B7)". The status bar at the bottom indicates "Ready", "Sheet1", and "Sum=60,4".

PowerPoint Mobile

PowerPoint Mobile can slide the PPT file. You can copy the files via sync or copy to the Mini SD card.

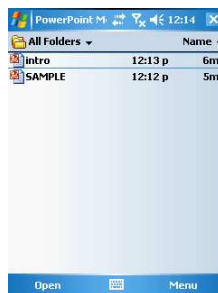


The screenshot shows the PowerPoint Mobile application interface. The title bar reads "PowerPoint M" and the status bar shows "12:14". The file list is as follows:

All Folders	Name		
	Intro	12:13 p	6m
	SAMPLE	12:12 p	5m

The status bar at the bottom indicates "Open" and "Menu".

Microsoft® Windows Media™ Player

Microsoft® Windows Media™ Player can play the audio and video files that are stored in your device or on a network. You can play files with extension names of .asf, .wma, and .mp3.

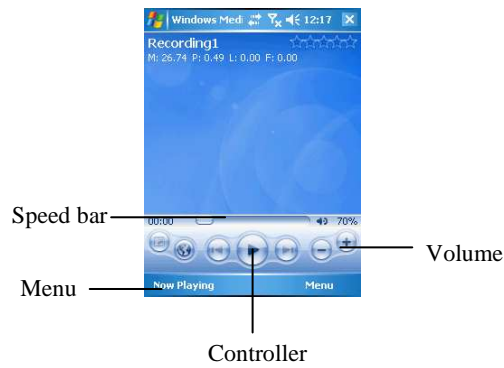

Playing items in your phone.

Use the Library to find and play songs, videos, and playlists that are stored in your Pocket PC or removable storage card.


If you are not on the Library screen, click MENU>Library.

1. On the Library screen, click **Menu >Update Library**. The mobile will automatically search the files. Press and hold the file, and you can choose to Queue Up.
2. Or click **Menu> Open files**. Click a category (for example, my music or my play lists), click and hold the item that you want to play (such as a song, album, or artist name), and then click Play or Queue Up.


6 Settings

Clock Settings

1. In Today window, click the **Date** item.

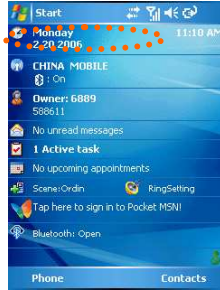

 2. Modify the clock and date: select the items and click the arrow to adjust the correct contents.

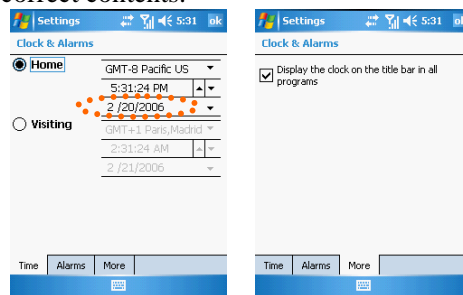


Tips: Tap “Others” in the settings window, you can choose “Display the Clock on all windows”. Tap “More” in the settings window, you can choose “Display the Clock on the title bar in all programs”.

3. Click OK to save the new clock and date.

Alarms Settings

 1. In Today window, click the **Date** item.
2. Click Alarms to switch to the alarms setting window. And select the time that the alarm works.

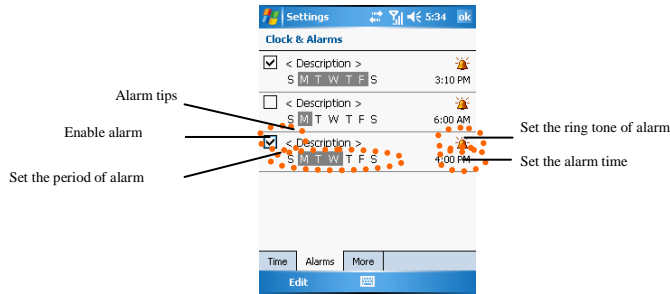


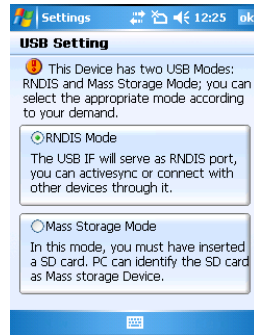
USB settings

The device has two USB setting modes: RNDIS mode and Mass Storage Mode.

RNDIS mode: USB is used as an RNDIS port, you can ActiveSync or connect with PC or other devices.

Mass Storage mode : This mode works only when you have inserted a SD card. PC will identify the SD card as a Mass storage device.


1. In Today window, click  ---Settings.
2. In the System panel, click **USB Setting** icon.
3. In the window, please check the mode you needed. In the USB Setting window, please select the appropriate mode according to your demand.




4. Click “OK” to save.

Tips: As you set the FlashDisk mode, your phone can not sync with PC. If you have selected the Mass storage mode, your phone can not be synchronized with PC.

Memory Management


1. In Today window, click  ---Settings.
2. In the System panel, click the Memory icon.
3. In the Memory screen, you can see the current memory allocation and make modifications manually.

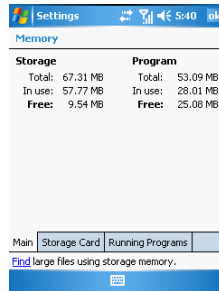

4. In the Running Programs panel, you can select and stop the applications in the Running Program List.


Master Reset

If you need to clear all the data and the programs you installed, you can run “Restore Factory Defaults”.


1. In Today window, click  ---Settings.
2. In the System panel, click “Restore Factory Defaults”.
3. Following the steps, you can erase all the user data. Following the steps, you can restore your phone to factory default.

Warning : It will restore to the factory setting, erased all data and applications. Please do mention to do. It will restore your phone to factory default, an may erase all user data or applications. Please do mention to do.

Performance Settings

1. In Today window, click  ---Settings.


- In the System panel, click the Performance Setting icon.
- In the Performance Setting screen, you can select the working mode of the phone between the options, Normal Mode, and High Performance Mode. The speed of the CPU is different in different mode, and leads to different power consume.

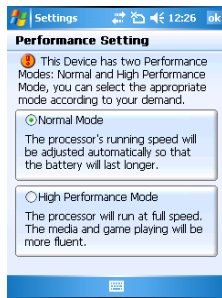


- Click OK to save the new settings.

Button Settings


You can set the button as the shortcut to the specific program, based on your personal preference.


- In Today window, click  ---Settings.
- In the Personal panel, click the Buttons icon.
- In the Buttons screen, select the button you want to change in the “1.Select a button:”, and select the program assigned to the button in the “2. Assign a program:”

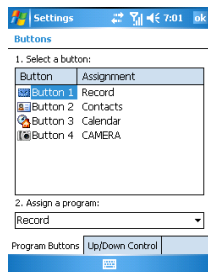

- Click OK to save the new setting.

Sounds & Notifications Settings

1. In Today window, click “ ---Settings”.
2. In the Personal panel, click the Sounds & Notifications icon.
3. In the Sounds & Notifications screen, select the sounds for screen taps, or sounds the events and programs.

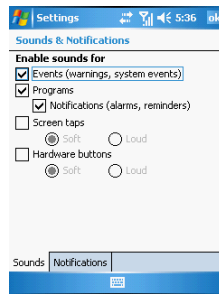

4. Click OK to save the new settings.

Software Installation

You can install software, which you get from software vendors or downloaded from the Internet, into your phone. Please make sure the platform needed for the software, including the hardware platform and the software platform, before install the software into your phone.

Installing via ActiveSync


1. Copy the software to your PC, or put the software CD in your PC driver.
2. Setup the connection between your PC and phone.
3. Double click the installation program of the software. And all the related files copy to your phone automatically.

Tips: for the software that does not have installation program, you can simply copy the execution file (*.exe or *.cab) to the folder in your phone. Click the software to finish the installation. Such software can not be removed by Settings-Remove Programs. In the screen of “no transform program is selected”, click “OK” button.

Removing programs

You can remove those programs you don't use, to release more memory space. Be sure that you can only remove those programs you install into the phone. Close it first before you remove the program.

Automatically removing

1. Click  --Settings, and select the System panel and Remove Programs icon.
2. In the storage memory list-box, select the program item and click the Remove button to remove it.


Manually removing


In the program you want to remove is not listed in the storage memory list-box, you have to remove it manually.

1. Start Explore and find the program file.
2. Click and press the name of the file, and select "Remove" from the popup menu.

Tips: Manual removal might not remove all the files and settings related with the software.

Setting Theme


1. Click  --Settings-Personal, and select the **Today** icon.
2. In the screen of Today, you can select a theme for your phone, or click the Browser button to search for the picture file you want to use as the background.

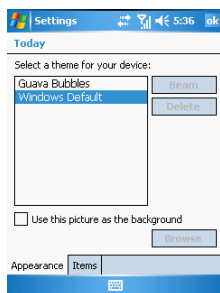

If you want to create a theme by yourself, you can download the theme creation software provided by Microsoft. And you can create the theme by yourself or download the theme file from the Internet.


GPRS and MMS Settings

GPRS connection settings

1. Tap “ >settings>connections> connections”.
2. Tap “Advanced” and “Select Networks”.
3. In the Network Management windows, tap **New** below the “Connect to the Internet” information.
4. In General window, enter the name , such as “Internet settings”;
5. In MODEM window, Tap **New** and follow the new connection wizard.
6. Name the connection, such as “My GPRS”. And you can select “Cellular Line” or “Cellular Line (GPRS) from the list box “Select a modem.”.
7. In the Access Point Name, input the name and click “Next”;
8. Enter the “User name”, “ Password” and “Domain”; if necessary, click “Advanced” to set up the other information.
9. Tap “Finish” button.

MMS Settings

Step 1 : Setup MMS connection in the connections window

1. Tap “ >settings>connections> connections”.
2. Tap Advanced Tab. Click “Select Networks” button.
3. In the Network Management windows, tap **New** below the “Connect to the Internet” information.
4. In General window, enter the name , such as “MMS”;
5. In MODEM window, Tap **New** and follow the new connection wizard. Please input the name, select the modem (such as the Cellular line (GPRS)), enter the Access point name, and so on. Tap **Finish** to save it.
6. In the “Proxy Settings” window , after checking the two options , Tap **Advanced** button and input the server inform which you can refer to the operator. Click OK to save.

Step 2 : Setup the SERVER in MMS software

1. Start up MMS.
2. Tap Menu/MMS Configuration... ;
3. In the Servers window, Tap Sample Server and type the information, which you can refer to the operator. And select the connect name which is established in step 1 from the "Connect Via". Tap OK to save.
5. Tap OK to quit.

Troubleshooting

Low battery

When the battery is low, you can see the battery icon displayed in the navigation-bar. And a popup screen displays will remind you to charge your battery at your earliest convenience.

There is a Li-Poly battery built in your phone. When the Li-Poly battery is low, your phone turns off automatically.

Why the charging light is not on when charging?

When the battery is very low, the charging light does not turn on until there is enough power in the battery to power the light. So charge the battery for a period of time before you can see the charging light blinks and turn on your phone.

Why the charging light is always on when charging for a longtime?

When your phone is not in Flight mode and the SIM card is not inserted, the power will be consumed at the same time of charging. The light cannot be turned off.

As charging , why the charging light is always twinkle?

For the battery is in the charging protection status. Please reinsert the battery until the light is normal.

The screen does not respond or respond very slowly.

Click the RESET button to reboot your device.

Nothing displayed.

Please check the status of the HOLD key. If in the status of Lock, you should unlock it before the LCD works. If nothing displayed on the screen while the HOLD key unlocked, you should press the **power** key for a second. If nothing happens yet, please charge your phone. And then soft reset your phone.

Stylus is abnormal.

Redo the stylus adjustment.

Cannot connect to the Internet

First, ensure that the settings for the Internet are correctly. For details, please refer to the section for “GPRS connection settings” in the User’s Guide.

Check the wireless connection between your phone and the mobile service provider, whether connected, any obstruct, etc.

Tips: Make sure you have got the service from your operator. You cannot set up the GRPS connection when you are in the process of synchronizing your phone with your PC.

Why the phone automatically set up the GPRS connection again after disconnection ?

Please check whether the application IE is accessing a URL, or the MMS application is in the process of sending/receiving an MMS. In either of the two situations, the phone connects GPRS automatically. If you don’t need the connection, close the application or applications. Then the GPRS will be disconnected.

Don’t remember the turn-on password.

You have to contact the customer service center.

When taking pictures, why can’t I use the digital zoom in/out function?

Please make sure that the picture size is not in the largest resolution. The phone does not support zoom in/out function in the largest resolution mode.

During an incoming call, why is the indicator light not synchronic with the ring tone?

Please check whether the ring tone file is saved in the Mini SD card. If so, please copy it into the directory of “My Documents” and reset.

Specification

Processor : Intel PXA270 312MHz

Memory : 128MB FlashROM + 64MB SDRAM

Operating System: Microsoft Windows Mobile 5.0

LCD: 2.8" 240 x 320 resolution, 260k colors TFT

Network : GSM/GPRS 900/1800/1900

Camera: 2.0M Pixels

Connectivity: USB, Bluetooth, Mini SD Card

Battery: Li-Poly 1100mAh

Size : 111 mm x 60 mm x 21 mm

Weight : 147grams with battery

Battery life estimates:

Talking time : 4 ~ 6 hours*

Standby time : 120~200 hours*

* Subject to local and network conditions

* Subject to the signal and environment status of the local network.

Many functions stated in this instruction are the special services offered by the network service operators, thus the availability of such services is subject to the network service operator serving you.

Only use the phone accessories recognized by our company. Your phone may be damaged due to the use of unauthorized accessories and we shall not be liable for any consequence wherefrom.

